Installation Manual_AMD

Thermaltake
COOL IT YOUR LIFE

Contac 30

P/N:CLP0579

Application for

AM3

- Phenom II X4 - Phenom II X3 - Phenom II X2

AM2+ / AM2

- Phenom X4 - Phenom X3 - Athlon 64 FX
- Athlon 64 X2 - Athlon 64 - Sempron

Parts List

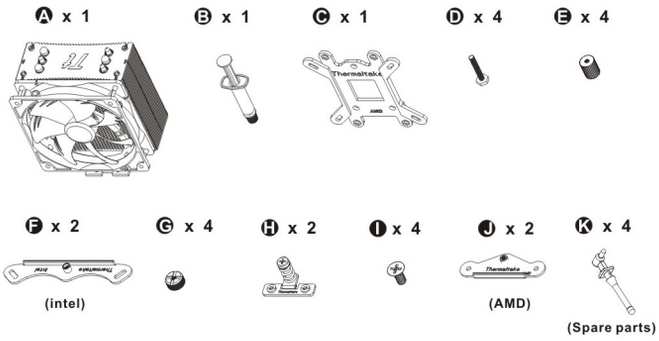

Parts list :

- Ⓐ Cooler x1
- Ⓑ Grease x1
- Ⓒ Back plate x1
- Ⓓ Long screws x4
- Ⓔ Plastic spacers x4
- Ⓕ Mounting bars(Intel) x2
- Ⓖ Nuts x4
- Ⓗ T- Mounting bars x2
- Ⓘ Screws x4
- Ⓙ Mounting bars(AMD) x2
- Ⓚ Vibration-absorbing Soft Mount x4

Installation Preparation

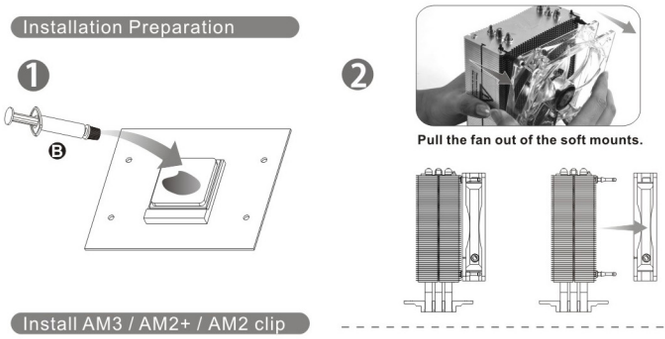

1. Apply a thin layer of Thermal Grease onto the CPU.

2. The fan of the cooler must be removed before the installation.

Install AM3 / AM2+ / AM2 clip

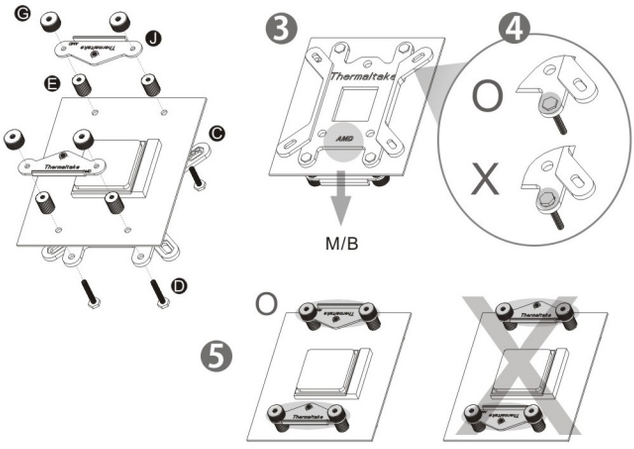

3. When you install an AMD CPU, please make sure that the back plate side facing away from the motherboard shows the AMD logo.

4. Insert the four Long screws(D) through the back plate(C) into the four holes on the motherboard and secure them with the four plastic spacers(E) evenly.

⚠ Caution:
please verify the four Long screws are put into the holes fully.

5. Put the two mounting bars(J) along the four Long screws(D) and secure them with the four Nuts(G).

Install the heatsink to the CPU

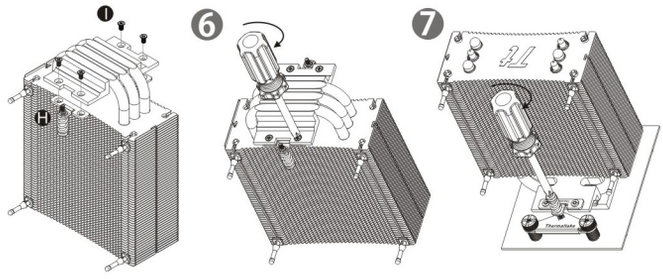

⚠ Caution:
please verify the wave sides of the mounting bars are pointing inwards.

6. Secure the two T- Mounting(H) bars to the base of cooler by screw(I).

7. Place the assembled heatsink onto the CPU and tighten each fixing bolt evenly.

Install fan

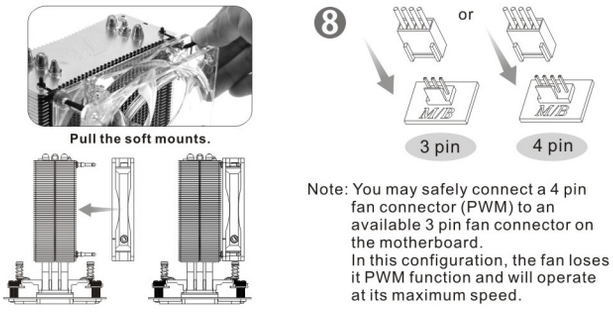

Note: You may safely connect a 4 pin fan connector (PWM) to an available 3 pin fan connector on the motherboard.
In this configuration, the fan loses it PWM function and will operate at its maximum speed.

8. Connect the 4 pin wire to the motherboard's CPU fan connector (3 pin or 4 pin).

Air Flow

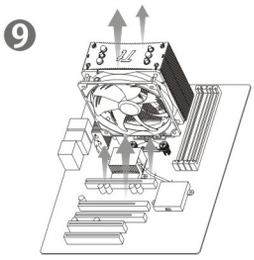

9. Completed

©2010 Thermaltake Technology Co., Ltd. All Rights Reserved.

BK00211 2010.08

www.thermaltake.com

RoHS COMPLIANT AE61

Please visit our Support Section for more technical support or update at www.thermaltake.com

Installation Manual_Intel

Thermaltake
COOL IN YOUR LIFE

Contac 30

P/N:CLP0579

Application for

LGA 1366
- Core i7

LGA 1156
- Core i7 - Core i5 - Core i3

LGA 775
- Core 2 Extreme - Core 2 Quad - Core 2 Duo
- Pentium D - Pentium 4 - Pentium - Celeron D
- Celeron

Parts List

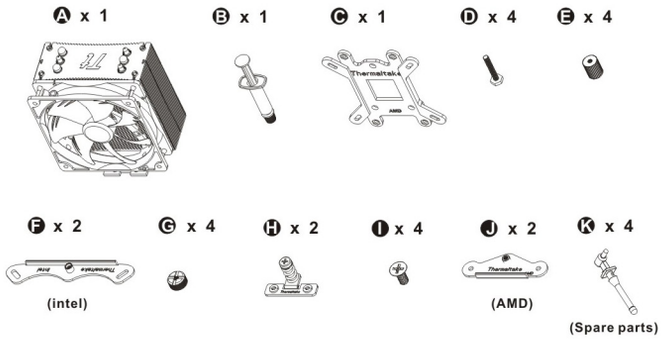

Parts list :

- Ⓐ Cooler x1
- Ⓑ Grease x1
- Ⓒ Back plate x1
- Ⓓ Long screws x4
- Ⓔ Plastic spacers x4
- Ⓕ Mounting bars(Intel) x2
- Ⓖ Nuts x4
- Ⓗ T- Mounting bars x2
- Ⓘ Screws x4
- Ⓙ Mounting bars(AMD) x2
- Ⓚ Vibration-absorbing Soft Mount x4

Installation Preparation

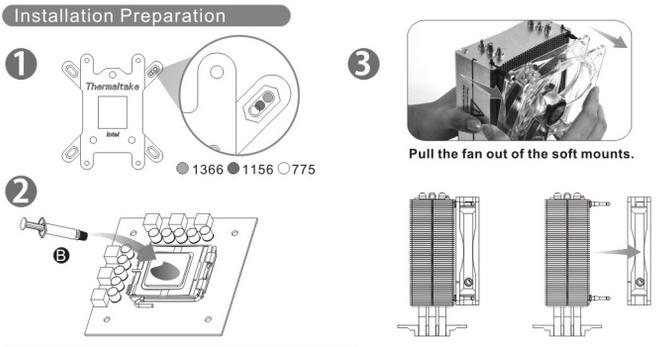

1. Before Installation, please verify the CPU platform and select the appropriate holes for your CPU socket.

2. Apply a thin layer of Thermal Grease onto the CPU.

3. The fan of the cooler must be removed before the installation.

Install Intel LGA1366 / 1156 / 775 clip

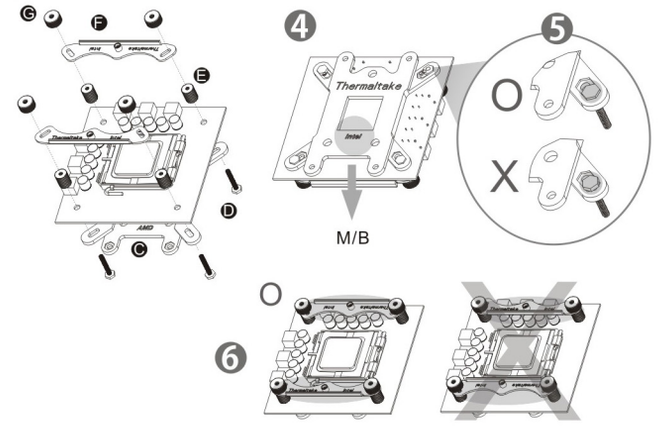

4. When you install an Intel CPU, please make sure that the back plate side facing away from the motherboard shows the INTEL logo.

5. Insert the four Long screws(D) through the back plate(C) into the four holes on the motherboard and secure them with the four plastic spacers(E) evenly.

⚠ Caution:
please verify the four Long screws are put into the holes fully.

6. Put the two mounting bars(F) along the four Long screws(D) and secure them with the four Nuts(G).

Install the heatsink to the CPU

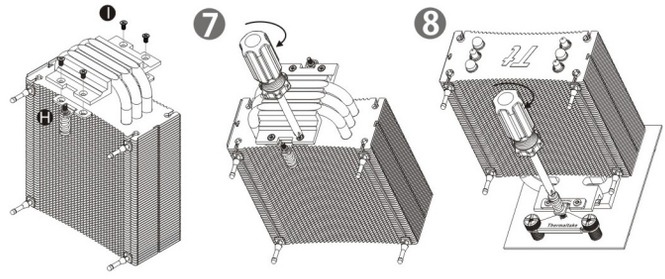

⚠ Caution:
please verify the wave sides of the mounting bars are pointing inwards

7. Secure the two T- Mounting(H) bars to the base of cooler by screw(I).

8. Place the assembled heatsink onto the CPU and tighten each fixing bolt evenly.

Install fan

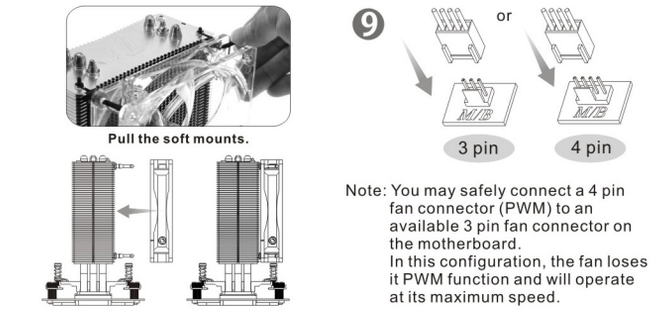

Note: You may safely connect a 4 pin fan connector (PWM) to an available 3 pin fan connector on the motherboard.
In this configuration, the fan loses it PWM function and will operate at its maximum speed.

9. Connect the 4 pin wire to the motherboard's CPU fan connector (3pin or 4pin).

Air Flow

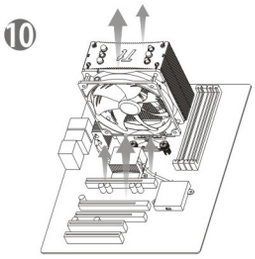

10. Completed

©2010 Thermaltake Technology Co., Ltd. All Rights Reserved.

BK00212 2010.08

www.thermaltake.com

RoHS COMPLIANT AE61

Please visit our Support Section for more technical support or update at www.thermaltake.com